

Tailor made
innovative
designs...

Contents

- 1 x Tambour shutter door system
- 2 x System Fixing brackets
- 1 x fascia panel
- 1 x Bottom panel edge strip
- 2 x Door runners
- 23 x 1/2" x No.6 Csk screws


Familiarise yourself with the above components and carefully read through instructions prior to installing your tambour unit.

We recommend that installation is only carried out by a competent kitchen fitter.

General Care & Maintenance

Clean your shutter door using a non-abrasive cleaning product on a soft dry cloth.

If after time you feel the shutter mechanism needs attention, lightly smear a small amount of petroleum jelly into the inside of the door runners.

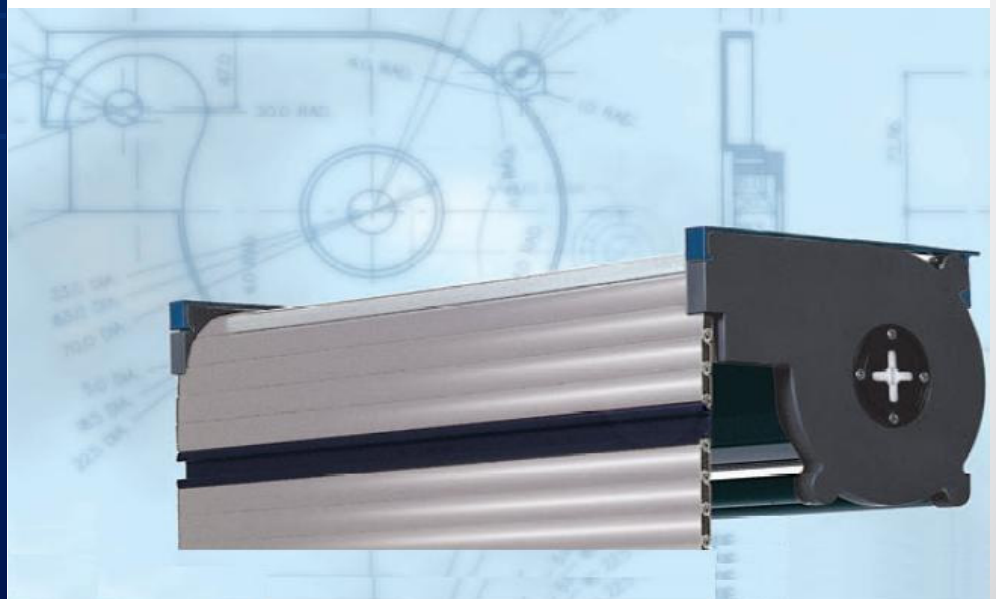

Tailor made
innovative
designs...

Fitting Instructions


Ensure all fixtures and fittings are correct before starting installation. Tools required: Electric screw driver.



1. Position the fixing brackets at either side of the unit's top panel flush with the front edge of the carcass. Secure into place using the screws provided.



2. Attach the top fascia panel to the unit using the mounting lip on the reverse as a guide. Secure using the screws provided and double sided adhesive pads.

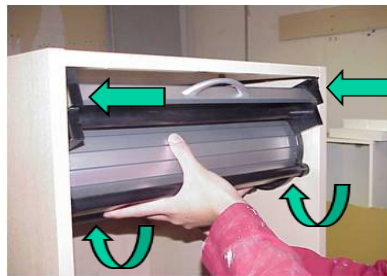

3. The Tambour shutter can now be placed into the unit. Firstly, make sure the handle is wound down sufficiently so as the door can be closed, then place the front lip of the fixing bracket into the slot on the front edge of the shutter system. Push the system up from the rear to lock it into place. NB: The picture does not display the top panel, this is for instruction purposes ONLY. The fascia panel must be fitted prior to inserting the shutter.



4. Check that the shutter door is functioning correctly prior to continuing with assembly.

Tailor made
innovative
designs...

Fitting Instructions cont...



5. Attach the bottom panel edging strip using the double sided adhesive pads.



6. To fix the runners onto the system. slide the relevant side door runner upwards so that it finishes flush with the underside of the top fascia panel, making sure that the shutter door is running smoothly into the channel (A). Then carefully mark a line at the bottom end of the runner so that it runs the full length of the side panel and sits on the bottom panel.(B)



7. After carefully cutting the required length, file the cut edge smooth then fix to the units side panel. Use the 6 pre-countersunk holes and screws provided.



8. Finally, check the smooth operation of the shutter door mechanism, Make sure that the shutter door is closing freely from the top to the bottom.